

SHARP



Hard reset manual

Party Street Beat

PS-949 Portable Party Speaker


EN

ENGLISH

How to hard reset the XParty Street Beat

To hard reset your unit, please do the following:

1. Ensure the unit is plugged into a power source via the AC input.
2. Locate the pinhole reset button on the rear I/O panel (shown below).
3. Insert a suitable small pointed object - such as a paperclip into the hole. Hold the button down for 2-3 seconds until the device resets.

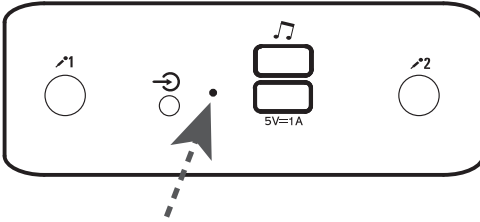

NOTE: The unit must be connected to the mains power supply for the hard reset to work.



Sharp Consumer Electronics Poland sp. z o.o.
Ostaszewo 57B, 87-148 Łysomice, Poland
Made in China

SAU/MAN/0199

www.sharpconsumer.eu

SHARP