



SHA/QSW/0277



# SHARP

## Technical Specification

	<b>32FE2K 32FE4K 32FE6K 32FE7K</b>
Energy Efficiency Class (SDR)	E
Power consumption (SDR)	26 W
Screen resolution (pixels)	1366 x 768
Screen Size (diagonal)	81 cm / 32 inches
RF	75 ohm Antenna / Analog / DVB / Satellite
Inputs	3 x HDMI • 2 x USB • 1 x RJ45 LAN/Ethernet 1 x Composite/CVBS Video Input 1 x L/R Audio input for Composite/CVBS
Sound Outputs	1 x Digital Optical Audio output, 1 x 3.5mm Headphone
Speaker/ Amplifier Watts (RMS)	2 x 10 / 2 x 8
Voltage and power consumption	AC 220V ~ 240V; 50/60Hz 26/55/65W (home mode/standard/max) (<0.5W in Standby)
Dimensions including stand (mm)	736W x 475H x 180D
Net weight (Kgs)	3.7
Wall Mounting	VESA 200 x 100 (mm)

### HDMI

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

### Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

### DTS HD

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. (for companies headquartered in the U.S./Japan/Taiwan) or under license from DTS Licensing Limited (for all other companies). DTS, DTS-HD Master Audio, DTS-HD, Virtual:X, and the DTS-HD logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.

## Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions. (Available online to download.)

### Model Numbers

**32FE2K  
32FE4K  
32FE6K  
32FE7K**

Register your manufacturers guarantee online within 14 days of purchase at [www.registertoday.co.uk/sharp](http://www.registertoday.co.uk/sharp) and enter into a prize draw to...



### Quick & easy guide for setting up your TV

- What is included in the box
- Using the remote control
- Setting up the TV for the first time - including attaching the stand
- Connecting other devices to the Television

### Need help setting up or using your TV?

Please contact the UK & ROI Helpline\*  
Telephone UK 0330 024 0803 or ROI 01443 3323  
Online support at: [www.umc-uk.co.uk](http://www.umc-uk.co.uk)  
Email support at: [service@umc-uk.co.uk](mailto:service@umc-uk.co.uk)

\*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider. Hours are correct at time of this document being published. Please note these hours are subject to change periodically. Calls to the ROI number are charged at the local call rate.

The helpline telephone opening hours are:  
Monday - Friday: 8.30am – 6pm

For Saturdays and Bank Holidays, please refer to the website for our opening hours.



SHA/QSW/0277

### Sky Remote Code

If you wish to use your Sky remote to operate the TV's basic functions, you will need to program it with the code 2134. If you wish to use your Sky Q remote to program it with the code 2134, if you wish to use your Sky Q remote to operate the TV's basic functions, you will need to program it with the code 4170.

Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft. Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

### Microsoft PlayReady™



RF Cable

If you don't have the RF cable shown below, then you can purchase one from [www.umc-uk.co.uk/cables](http://www.umc-uk.co.uk/cables). If you are intending to connect your TV to an RF socket in order to receive Freeview you will need this cable.

### Additional Accessories

- 1 x Quick Start Guide
- 1 x Remote Control and 2 x AAA Batteries
- 1 x Safety Leaflet
- 1 x Stand installation pack

Included with this TV are the following accessories

## What is included in the box

To launch the online manual, press the MENU button on the remote control, select About from the menu, and select Help Information.

## Online Manual

## REMOTE CONTROL



- 1** STANDBY - Switch on the TV when in standby or vice versa. SOURCE - To display the input/source menu.
- 2** NUMBER BUTTONS - 0-9 to select a TV channel directly. MUTE - Mute the sound or vice versa. GUIDE - Opens the 7 day TV guide (digital TV mode).
- 3** MENU - Displays the OSD menu. FAV - Displays the favourites menu. INFO - Press twice for information about the current programme. INFO - Press once for now/next channel information. ▲/▼/▶/◀/OK - Allows you navigate the on-screen menus and adjust the system settings to your preference. BACK - To go back a previous step. APPS - Access the Apps menu. EXIT - To exit all menus. VOL (+/-) - Tilt to increase/decrease the sound level. CH (+/-) - Tilt to move up or down the channel being watched.
- 4** NETFLIX - Access the Netflix App. PRIME VIDEO - Access the Prime Video App. YOUTUBE - Access the YouTube App. FREEVIEW PLAY - Access the Freeview Play App. AUDIO - Scrolls through the sound mode options. SUB - To switch the dialogue at the bottom of the screen (on/off). TEXT - To enter/text Teletext. TV - To switch to digital Channels. TV - To play/pause. To play in fast forward mode. To play in fast rewind mode. To stop the playback.
- COLOUR BUTTONS** - Execute corresponding function at that time

Key

For models with integrated DVD players. For models with USB Playback.

# Setting up the TV set for the first time

## 1 Fitting the stand

 
TV panel must be facing downwards.

For the stand installation, there is one type of screw provided as shown below.


**Note:** To complete the stand installation you will require a cross head screw driver.

4 x 

Used for attaching the stand to the TV set (fig.3)

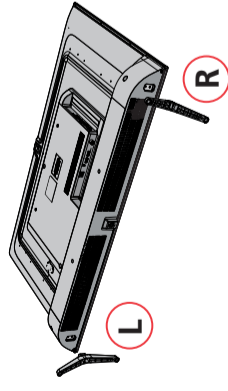

 
1 Place the TV set on a flat and clean surface with the panel facing downwards to avoid damage.

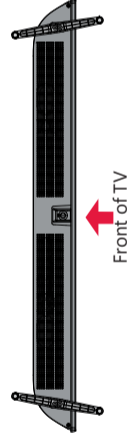


2 Ensure the stand feet match the orientation as shown above.

4 x 

 3 When the stand/feet are in the correct position, secure the feet to the underside of the TV set using 4 screws provided.

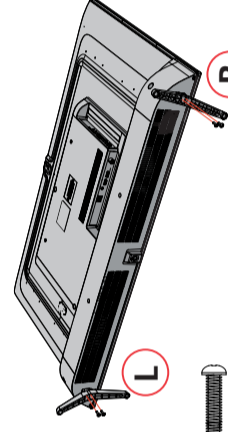


## 2 Connecting your set

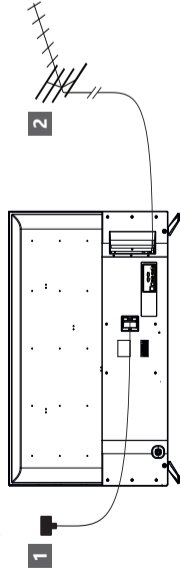 


1 Connect the TV to your power socket.  
2 If you wish to use the TV to receive Freeview/Saarview channels, connect the RF input from the TV to your outdoor Digital TV aerial. If you do not wish to receive Freeview/Saarview, skip this step.

## 3 Powering On the TV

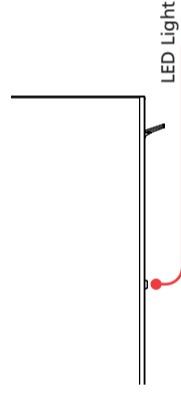 

Switch on the television by pressing the on/off button on the bottom of the LED light.

 Remote Control:  
Installing Batteries

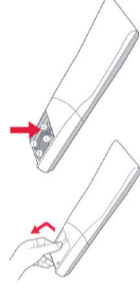

Insert the batteries supplied into the remote control and press the standby button to power on the TV.


## Win a SHARP Soundbar

 Register your manufacturers guarantee online within 14 days of purchase at [www.registertoday.co.uk/sharp](http://www.registertoday.co.uk/sharp) and enter into a prize draw to win a Sharp Soundbar

Terms and conditions apply, online registration only.



## Wall Mounting the TV

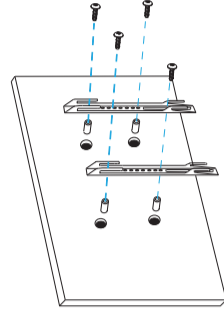


1 Remove the four screws that are supplied in the wall mounting holes.  
2 The wall mount can now be easily attached to the mounting holes on the rear of the TV.  
3 Install the wall mounting bracket to the television as advised by the bracket manufacturer.

Image for illustration only.

For the dimensions of the VESA mounting, please refer to the Technical Specifications section of this document.

## 4 First time installation

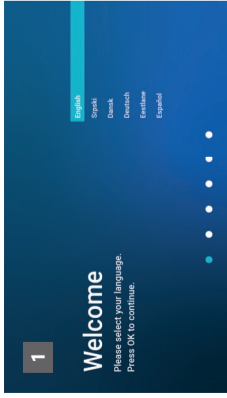 


**Introduction & Language**  
When the set first turns on, it enters the First Time Installation mode. This can be restarted by restoring the set to default settings in the 'About TV' Menu. Select your preferred on-screen display language. This will change the language in which the menus and associated information is displayed in.



**Time Zone**  
Set the Time Zone in which the TV will reside. This may be dependent on the country you select in step 2.



 
**Set up Netflix**  
If you have a Netflix account, it can be set up on the television here. Once set up and validated, the First Time Installation returns to the next step.

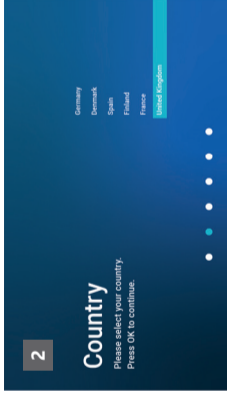

**Country**  
Select the correct country in which the set will be used in. This will enable the set to correctly install the functions applicable in the country of use.




 **Updates Notice**  
You will need to agree to certain information collection for the TV set to operate as intended.

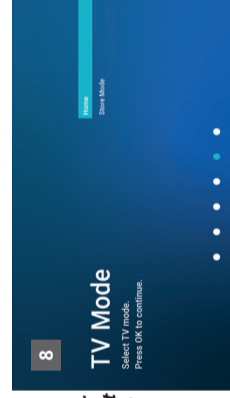


**TV Mode**  
**Note: In home mode, the TV will switch off automatically after 4 hours in the event that no buttons are pressed on the TV or remote control.**

 
Home Mode: For normal use, by default it is set to a power saving mode which reduces the energy used by up to 25% (by reducing the power to the LED/LCD panel). This can be changed in the picture mode settings.

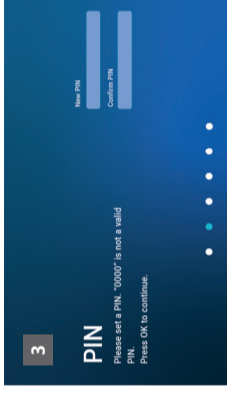

 **PIN**  
This needs to be set to establish parental controls.

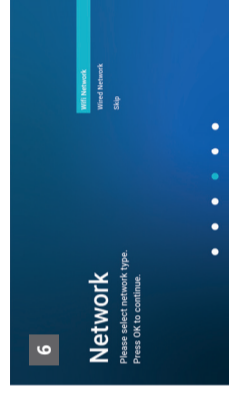


 **Network Set Up**  
You can connect the TV to your broadband router or wireless network in order to take advantage of the Smart functions. If you connect the TV to your router using an Ethernet cable, the Wifi set up will be skipped.

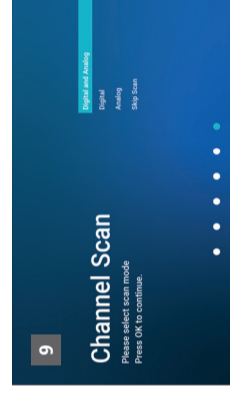

**Channel Scan**  
Choose to install terrestrial channels via Digital or Analog signals.  
**Note: Analog signals in the United Kingdom have been turned off. Only Digital signals are available.**

## Connectivity

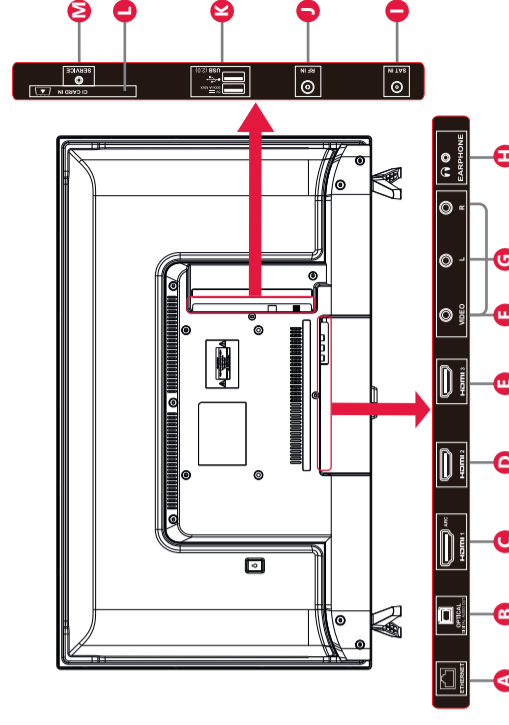 

Label	Port Type	Function
A	Ethernet/LAN	Network Connection
B	Digital Audio	Digital Optical Audio Output
C	HDMI 1 (ARC)	HDMI Input (ARC)
D	HDMI 2	HDMI Input
E	HDMI 3	HDMI Input
F	Video/CVBS	Composite Video/ CVBS input
G	U/R	Audio for Composite / CVBS input
H	Earphones	Earphones Input
I	SAT In	Satellite Input
J	RF In	RF / TV Aerial input
K	USB 2.0	USB 2.0 Input x2
L	CI Card In	Common Interface Module
M	Service Input	Input is used only by service centres