



SHA/QSW/0385

	43HM	50HM	55HM
Energy Efficiency Class (SDR)	G	F	F
Power consumption (SDR)	52 W	61 W	74 W
Power Efficiency Class (HDR)	G	G	G
Power Consumption (HDR)	101 W	112 W	136 W
Screen resolution (pixels)	3840 x 2160		
Screen Size (diagonal)	108 cm / 43 inches	126 cm / 50 inches	139 cm / 55 inches
RF	75 ohm Antenna • DVB • Satellite		
Inputs	3 x HDMI, 2 x USB, 1 x RJ45 LAN/Ethernet, 1x Mini Composite/CVBS + Audio input		
Sound Outputs	1 x Digital Optical Audio output • 1 x 3.5mm Headphone		
Speaker/ Amplifier Watts (RMS)	2 x 10 / 2 x 8	2 x 10 / 2 x 8	2 x 10 / 2 x 8
Input voltage	AC 220V ~ 240V; 50/60Hz		
Rated power consumption	130 W	138 W	160 W
Standby power consumption	<0.5 W	<0.5 W	<0.5 W
Dimensions including stand (mm)	957W x 619H x 230D	1111W x 702H x 260D	1226W x 771H x 260D
Net weight (Kgs)	6.6	9.7	11.0
Wall Mounting	VESA 300 x 300 (mm)	VESA 400 x 300 (mm)	VESA 400 x 300 (mm)



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.



© 2024 Xperi Inc. All Rights Reserved. TiVo and the TiVo logo are trademark(s) or registered trademark(s) of Xperi Inc. or its subsidiaries in the United States and other countries. All other trademarks and content are the property of their respective owners.

SHARP



Quick Start Set Up Guide

For information on using the TV's features, please refer to the Operating Instructions. (Available online to download.)

Model Numbers

43HM
50HM
55HM

REGISTER NOW!
**ACTIVATE YOUR MANUFACTURER'S
GUARANTEE WITHIN 14 DAYS OF PURCHASE
+ GET AN EXTRA 6 MONTHS FREE***



SCAN QR CODE TO ACTIVATE
Or use one of the methods below
sharpconsumer.eu/register
UK 0800 802 1838 (freephone)
ROI 01 270 8449
Lines are open 9am - 8pm, Mon - Sun

*UK and Ireland only.
For Product Support, use the number above and press option 2.



Quick & easy guide for setting up your TV

What is included in the box

Using the remote control

Setting up the TV for the first time - including attaching the stand

Connecting other devices to the TV

Need help setting up or using your TV?

Please contact the UK & ROI Helpline*

Telephone UK 0330 024 0803 or ROI 01443 3323

Online support at: sce-support.co.uk

Email support at: service.gb@sharpconsumer.eu


*Calls to 0330 numbers are charged at standard call rates and are included as part of any bundled minutes with your phone provider. Hours are correct at time of this document being published.
Please note these hours are subject to change periodically.
Calls to the ROI number are charged at the local call rate.

For telephone helpline hours please refer to www.sce-support.co.uk



SHA/QSW/0385

- 1. (standby)** – Switch on the TV when in standby or vice versa.
- 2. INPUT** – Displays the input/source menu.
- 3. NUMBER BUTTONS** – 0–9 to select a TV channel directly.
- 4. (mute)** – Mutes the sound or vice versa.
- 5. GUIDE** – Opens the 7 day TV guide (digital TV mode).
- 6. (settings)** – Opens the Settings menu.
- 7. (apps)** – Opens the apps menu.
- 8. INFO** – Short press: Press once to view information about the program you are currently watching. Press again to display the TV channel list. Long press: Opens Sharp Life Portal.
- 9. (▲/▼/←/→/OK)** – Allows you to navigate the on-screen menus and adjust the system settings to your preference.
- 10. BACK** – Short press: Step back in the menu. Long press: Exit the currently displayed menu or application.
- 11. (TiVo)** – Displays the TV's home screen.
- 12. FREELY** – Access the Freely service. Only available in the UK.
- 13. VOL (+/-)** – Tilt to increase/decrease the sound level.
- 14. CH (+/-)** – Tilt to switch to the next/previous channel in the sequence.
- 15. NETFLIX** – Access the Netflix App.
- 16. Prime video** – Access the Prime video App.
- 17. DISNEY+** – Access to the Disney+ app.
- 18. YOUTUBE** – Access to the YouTube app.
- 19. AUDIO** – Opens audio track menu.
- 20. SUB** – Turns on/off subtitles at the bottom of the screen.
- 21. TEXT** – Turns teletext on/off.
- 22. TV** – Switches the TV to the last watched input.
- 23. M1** – Play/pause media.
- 24. (◀▶)** – Play in fast rewind mode.
- 25. (▶▶)** – Play in fast forward mode.
- 26. (■)** – Stop playback.
- 27. COLOUR BUTTONS** – Execute corresponding function at that time.

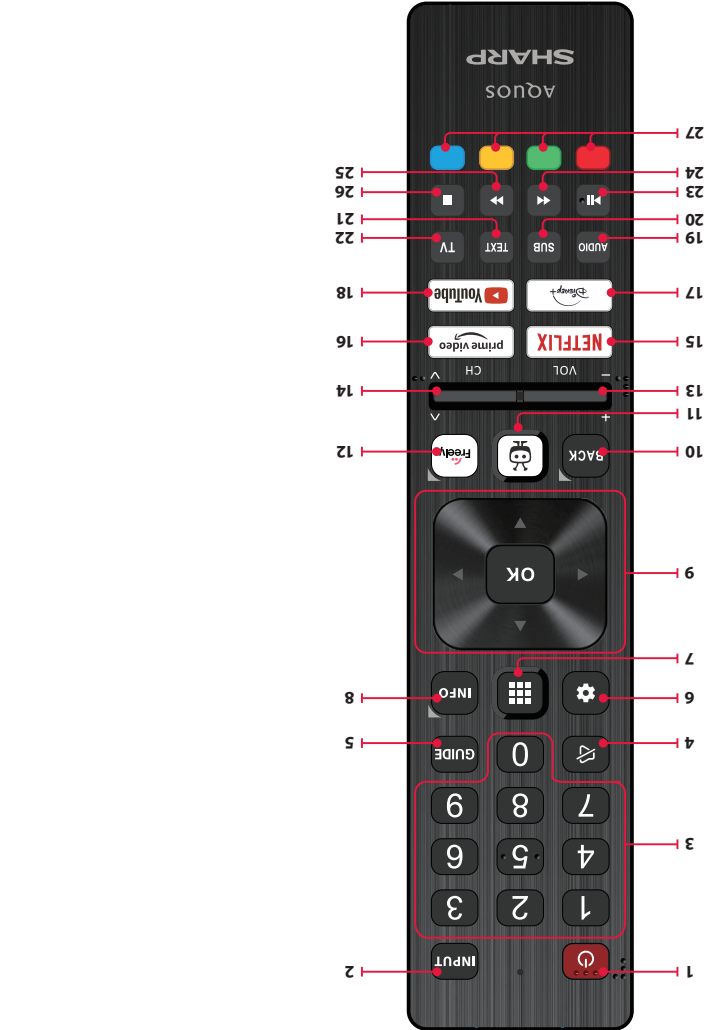

Using the remote control

Online Manual

To launch the online manual, press the (TiVo) button on your remote. On the home screen navigate to the control carousel and select "Life Portal", then select the option "Instruction manual".

What is included in the box

Accessories
Included with this TV are the following accessories

- 1 x Quick Start Guide
- 1 x Remote Control and 2 x AAA Batteries
- 1 x Safety Leaflet

Additional Accessories

If you don't have the RF cable shown below, then you can purchase one from shop.sce-support.co.uk
If you are intending to connect your TV to an RF socket in order to receive digital TV channels, you will need this cable.

RF Cable



Microsoft PlayReady™

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft. Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Sky Remote Code

If you wish to use your Sky remote to operate the TV's basic functions, you will need to program it with the code 4170.



Please save your box/packaging as you will need this in the event of warranty/service repair or support. We are unable to carry out warranty/service if you are unable to package it correctly. The safest way to package your item in the event of warranty/service repair is in its original box/packaging.


Setting up the TV for the first time

1 Fitting the stand


The TV panel must be facing downwards.

For the stand installation, there is one type of screw provided as shown below.

Note: To complete the stand installation you will require a cross head screw driver.

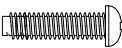
4 x 

Used for attaching the stand to the TV (fig.2)

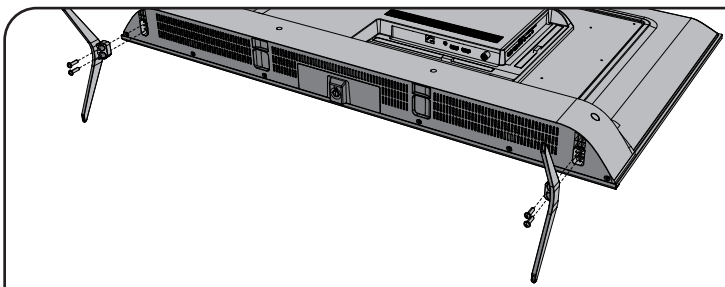

1

Place the TV on a flat and clean surface with the panel facing downwards to avoid damage.

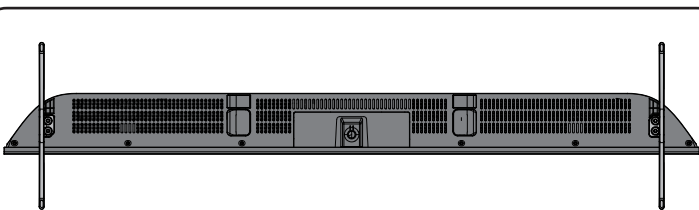

2

Ensure the stand feet match the orientation as shown above.

REGISTER NOW!
ACTIVATE YOUR MANUFACTURER'S GUARANTEE WITHIN 14 DAYS OF PURCHASE
+ GET AN EXTRA 6 MONTHS FREE*



SCAN QR CODE TO ACTIVATE

Or use one of the methods below

sharpconsumer.eu/register

UK 0800 802 1838 (freephone)

ROI 01 270 8449


Lines are open 9am - 8pm, Mon - Sun

*UK and Ireland only.

For Product Support, use the number above and press option 2.

SHARP
Be Original

2 Connecting your TV

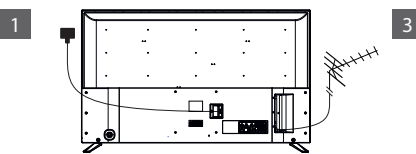


1 Connect the TV to your power socket.

2 To use Freely to receive free channels and on-demand shows, connect the TV to the internet. You can do this by connecting to Wi-Fi during the first time installation setup or by plugging in an Ethernet cable from your router to the TV.


3 If you choose to, you can top up your channels with an aerial connection. Connect the RF input from the TV to your outdoor Digital TV aerial.



3 Powering on the TV

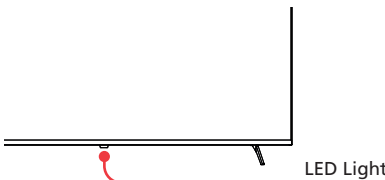


Switch on the TV by pressing the on/off button on the bottom of the LED light.

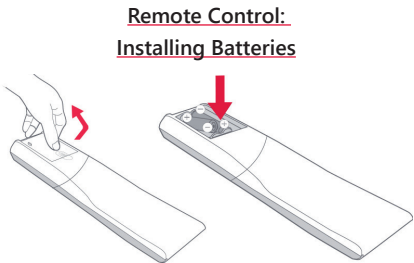

Remote Control:
Installing Batteries

Insert the batteries supplied into the remote control and press the standby button to power on the TV.

Wall mounting the TV

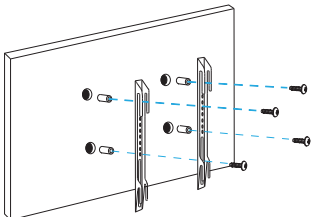


Install the wall mounting bracket to the TV as advised by the bracket manufacturer.

Image for illustration only.


For the dimensions of the VESA mounting, please refer to the Technical Specifications section of this document.

4 First time installation

Basic installation steps are shown below. These may vary slightly depending on your model. Due to software updates, the look and feel of the TV start up procedure and subsequent menus can be subject to change.

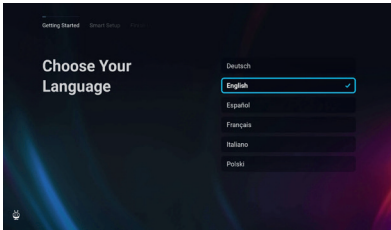


When the TV first turns on, select your preferred on-screen display language. This sets the language in which menus and information displays.

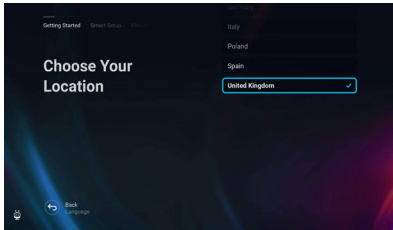

Select the country where your TV is physically located to ensure appropriate content availability and features. Further installation screens appear in sequence. Please read the information on each screen carefully and select the options that are most suitable for you.



On-screen keyboard

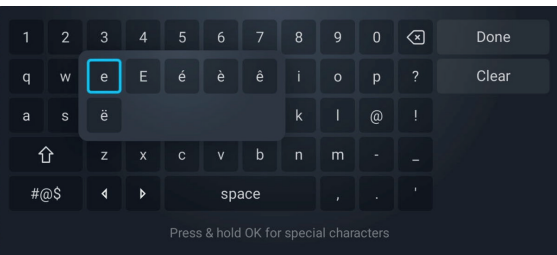

The on-screen keyboard lets you type text like a Wi-Fi password or movie title using your remote control. Highlight the character you want using the [ARROW] buttons and press [OK].

You can type characters with accents or diacritical marks by pressing and holding the [OK] button for 2 seconds on a character.

Thank you for purchasing this TV

We hope you have many years of trouble free enjoyment from your purchase.


Your product is covered under the manufacturers guarantee for 12 months from the date of purchase.

If you experience any difficulties with your TV, please refer to the 'Frequently asked questions' in the manual.

Please make a note of your TV model, the serial number and the date of purchase.

You will need this information should you need to call the helpline.

Connectivity

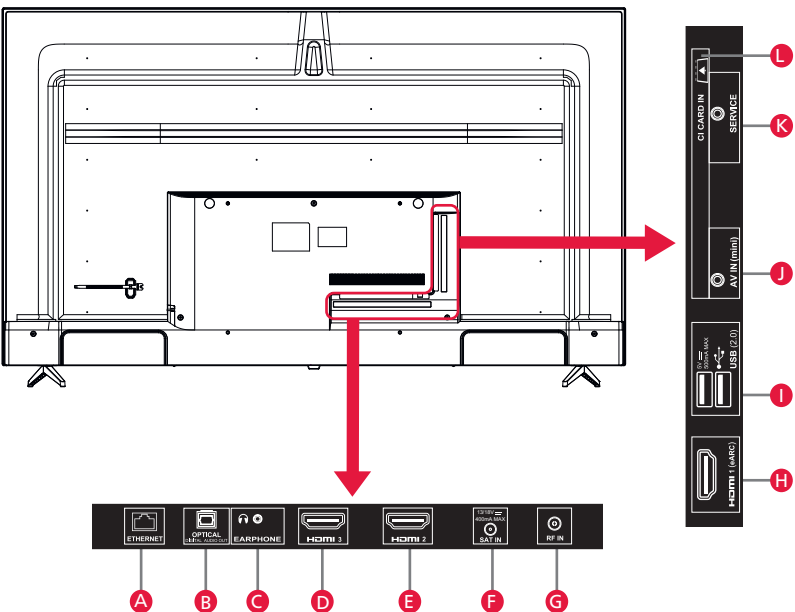

A Ethernet/LAN	Network connection	H HDMI 1	HDMI input (eARC)
B Digital Audio	Digital Optical Audio Output	I USB	USB 2.0 input x2
C Earphones	Earphone output	J AV IN	Audio/Video input
D HDMI 3	HDMI input	K Service Input	Input is used only by service centres
E HDMI 2	HDMI input	L CI Card in	Common Interface module
F SAT IN	Satellite input		
G RF IN	RF / TV aerial input		